

N1S Series Manual

Catalogs

*You can click on the catalog option headings to quickly get to the feature descriptions you need.

N1S Series Manual

Catalogs

Safety Notice

Scope of Delivery

Remote Control

Power Port and Power Button

N1S

N1S Pro 4K&N1S Ultra& N1S Ultimate 4K

Interface Descriptions

N1S

N1S Pro 4K&N1S Ultra& N1S Ultimate 4K

Launcher Main Functions

Home Screen

Dashboard

Network & Internet & Bluetooth Connection

Network&Internet (Wi-Fi)

Bluetooth

Common Projector Settings

Keystone Correction

1. Instant Gimbal-like Display Correction
2. Auto Keystone Correction
3. Manual Keystone Correction
4. Keystone Correction Settings
 - 4.1 Keystone Correction Upon Startup
 - 4.2 Keystone Calibration
 - 4.3 Smart Object Avoidance (Only for N1S Pro & N1S Ultra& N1S Ultimate)
 - 4.3 Auto Screen Fitting
 - 4.3.1 Smart Screen Alignment (Only for N1S)

Focus

- 1.Auto Focus
2. Manual Focus
3. Focus Settings
 - 3.1 Auto Trigger Focus
 - 3.2 Focus Calibration

Image Adaption

- 1.Movement and Zooming
- 2.Image Adaption

Projection Type

- 1.Auto Vertical Flip

Smart Eye Protection

Adaptive wall color(Only for N1S Pro & N1S Ultra& N1S Ultimate)

Display & Sound

Picture

- 1.Brightness
2. Adaptive Brightness(Only for N1S Pro & N1S Ultra& N1S Ultimate)
- 3.Picture Mode
 - 3.1User picture mode
 - 3.1.1AdvancedSettings-[MPEG_NR]/[Adaptive Luma Control]/[Local Contrast Control]/[MEMC]

Sound

Audio Output

Shortcut setting of HDMI (Including CEC)

1. Chromecast
2. Screen Mirroring via AirScreen

Google Assistant

Shutdown Menu Setup Instructions

JMGO APP

Safety Notice

Read this product manual thoroughly before attempting to use this product. Store the product manual in a safe location so it may be referenced at any time.

Don't look directly into the light lens of the device as your eyes may be damaged by strong laser.

When the projector is working, do not block the projection lens with any object.

If you encounter an issue with the product, do not attempt to disassemble it without authorization. Contact professional after-sales personnel to resolve the issue.

 
Scope of Delivery




Projector Body



Remote Control



Power Cable

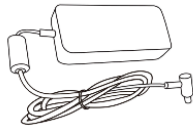 

Power Adapter



Quick Start Guide

 
 


AAA Battery x 2



Allen Wrench

Remote Control

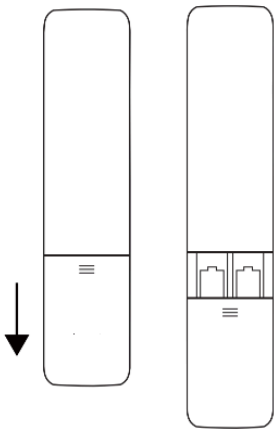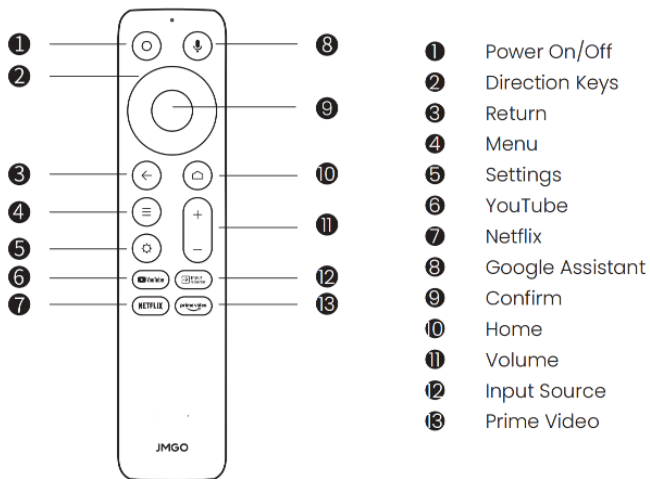


*After the projector is turned on, press and hold the **return button** and **home button** on the remote control for **3 seconds** at the same time to enter Bluetooth pairing.

Power Port and Power Button

The position and connection instructions of the power port are shown in the figure below; short press the power button to turn on and off: short press once to turn on, short press twice to turn off.

 N1S

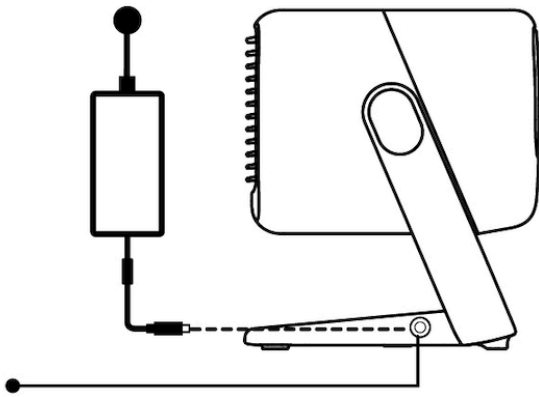

Connect the power cable.

Schließen Sie das Netzkabel an.

電源コードを接続してください

전원 코드 연결

Connectez le câble d'alimentation.

Conecte el cable de alimentación.

Collegare il cavo di alimentazione.

Conecte o cabo de alimentação.

連接電源線。



Short press the power button to power on.

Drücken Sie kurz die Einschalttaste, um das Gerät einzuschalten.

電源ボタンを短く押して起動してください

전원 버튼을 짧게 눌러 전원을 켜다

Appuyez brièvement sur le bouton d'alimentation pour allumer.

 
Presione brevemente el botón de encendido para encender.

Premere brevemente il pulsante di accensione per accendere.


Pressione brevemente o botão de energia para ligar.

短按電源鍵開機。

N1S Pro 4K&N1S Ultra 4K

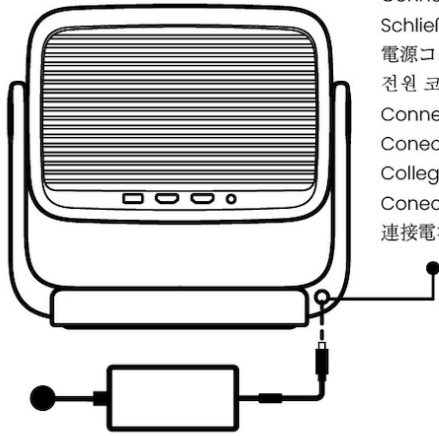

 Connect the power cable.
Schließen Sie das Netzkabel an.
電源コードを接続してください
전원 코드 연결
Connectez le câble d'alimentation.
Conecte el cable de alimentación.
Collegare il cavo di alimentazione.
Conecte o cabo de alimentação.
連接電源線。

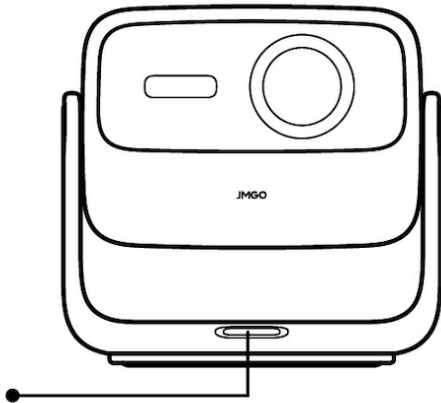

Short press the power button to power on.
Drücken Sie kurz die Einschalttaste, um das Gerät einzuschalten.
電源ボタンを短く押しして起動してください
전원 버튼을 짧게 눌러 전원을 켜다
Appuyez brièvement sur le bouton d'alimentation pour allumer.
Presione brevemente el botón de encendido para encender.
Premere brevemente il pulsante di accensione per accendere.
Pressione brevemente o botão de energia para ligar.
短按電源鍵開機。

 
Interface Descriptions

N1S

Product Manual




Power Button

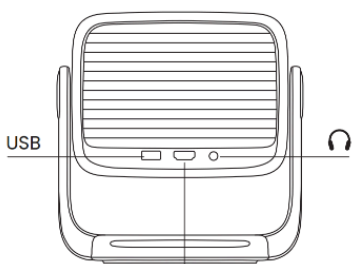

USB

 HDMI(ARC)

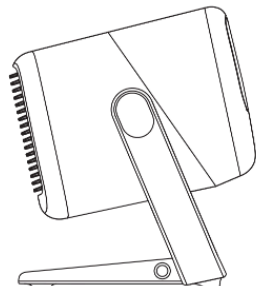


Power Port

Power on/off: The power button is a physical button, short press to power on or off.

N1S Pro 4K&N1S Ultra 4K&N1S Ultimate 4K

 Product Manual

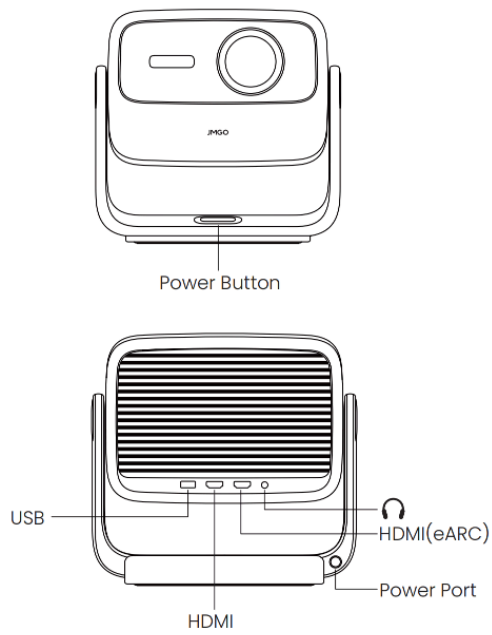


Power on/off: The power button is a physical button, short press to power on or off.

Launcher Main Functions

Home Screen

Manage accounts

 Search

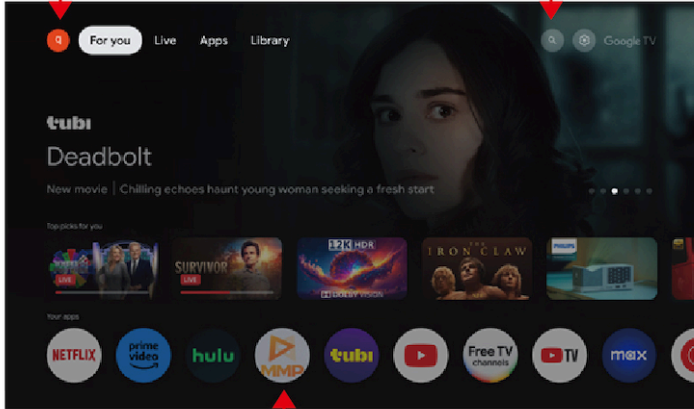


This is filemanager

***Live TV:** Live TV programs/channels (feature available in the US only)

Dashboard

 Press the [Settings] button on the remote control to call out the Dashboard, which allows you to quickly set up functions such as inputs, wifi, picture, and so on.

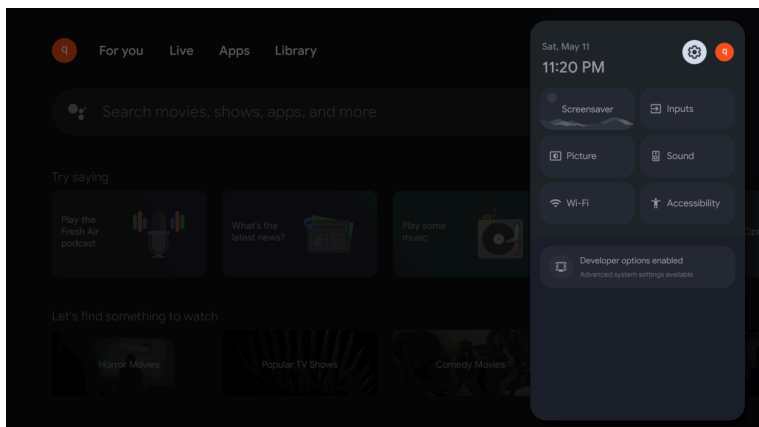

Network & Internet & Bluetooth Connection

 
Network&Internet (Wi-Fi)

Function path:

[Settings]—[Network&Internet]—[WiFi]/[Settings]—[Dashboard]—[Wi-Fi]

Function description:

Click this setting to connect to the WIFI network.

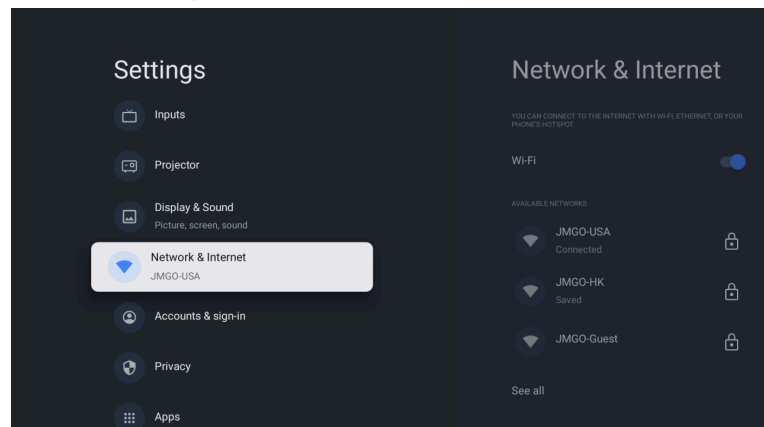

Bluetooth

 
Function path:

[Settings]—[Remotes&accessories]


Function description:

Click this option to search for and connect to Bluetooth external devices (such as Bluetooth stereos), including remote controls.


*It is recommended to keep the distance between the remote control and the projector within 10cm when pairing ;After successful pairing, the remote control can operate at a distance of up to 10 m.

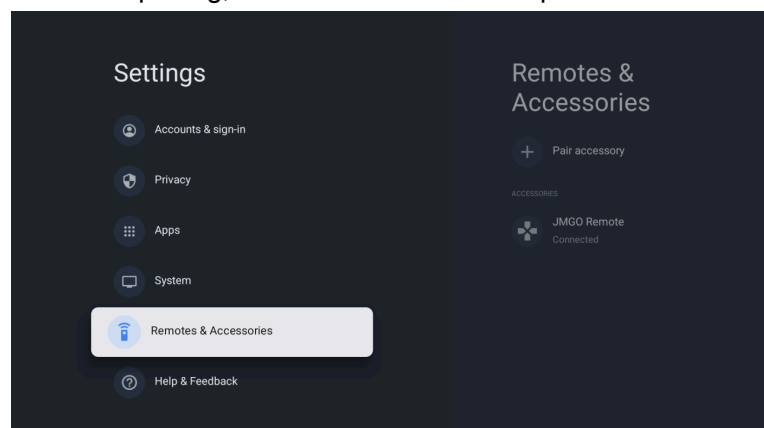

Common Projector Settings

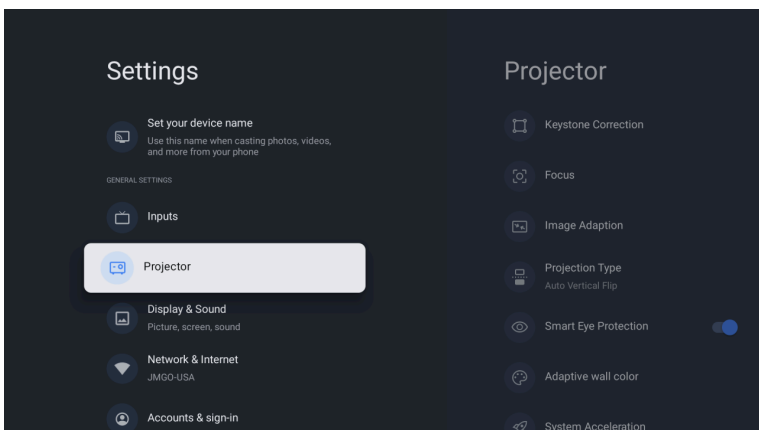 

Keystone Correction

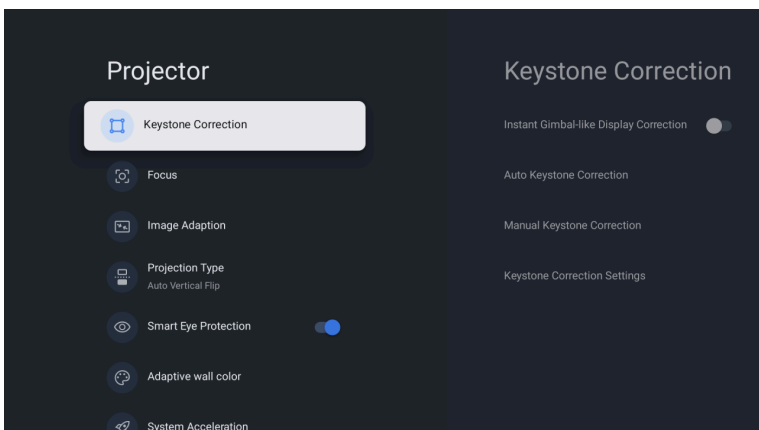 

1. Instant Gimbal-like Display Correction

Function path:

[Settings]—[Projector]—[KeystoneCorrection]—[Instant Gimbal-like Display Correction]

Function description:

This function is enabled by default and supports real-time image correction and focusing while the machine is moving.

2. Auto Keystone Correction

Function path:

[Settings]—[Projector]—[Keystone Correction]—[Auto Keystone Correction]

Function description:

Click this function once to perform an Auto Keystone Correction.

3. Manual Keystone Correction

 
Function path:

[Settings]—[Projector]—[Keystone Correction]—[Manual Keystone Correction]

Function description:

This function is turned off by default, and when it is turned on, manual adjustment of the four-point screen adjustment is performed.

4. Keystone Correction Settings

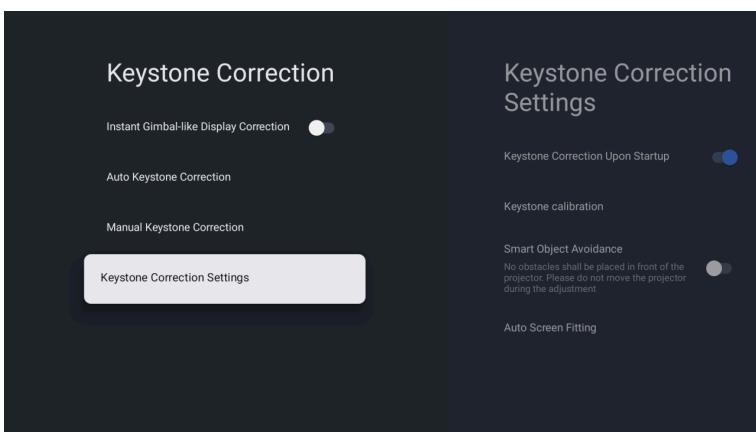

4.1 Keystone Correction Upon Startup

Function path:

[Settings]—[Projector]—[KeystoneCorrection]—[Keystone Correction Settings]—[Keystone Correction Upon Startup]

Function description:

This function is enabled by default and supports an automatic calibration when the machine is turned on.

4.2 Keystone Calibration

Function path:

[Settings]—[Projector]—[KeystoneCorrection]—[Keystone Correction Settings]—[Keystone Calibration]

Function description:

If you notice any abnormalities in the product's keystone correction, you can recalibrate by clicking this function to enter the calibration interface and follow the on-screen instructions.

4.3 Smart Object Avoidance (Only for N1S Pro & N1S Ultra&N1S Ultimate)

Function path:

[Settings]—[Projector]—[KeystoneCorrection]—[Keystone Correction Settings]—[Smart Object Avoidance]

Function description: This setting is off by default, and supports the machine to automatically avoid obstacles in the projection screen, when enabled.

4.3 Auto Screen Fitting

Function path:

[Settings]—[Projector]—[KeystoneCorrection]—[Keystone Correction Settings]—[Auto Screen Fitting]

Function description:

This setting is off by default, and supports the machine to automatically align the screen, when enabled.

4.3.1 Smart Screen Alignment(Only for N1S)

 
Function path:

[Settings]—[Projector]—[Smart Screen Alignment]

Function description:

To access this function, you need to download and install the “JMGO APP”. Click on [Smart Screen Alignment], use your phone's camera to take a photo for recognition, and upload it to the machine. The machine will then receive the command to automatically align the projected image with the screen.

Focus

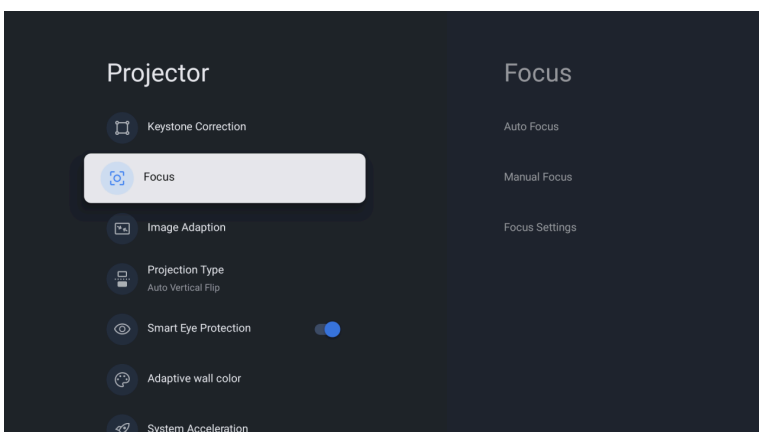

1.Auto Focus

Function path:

[Settings]—[Projector]—[Focus]—[Auto Focus]

Function description:

This setting supports the machine to do autofocus.

2. Manual Focus

 
Function path:

[Settings]—[Projector]—[Focus]—[Manual Focus]

Function description:

This setting supports manual focus.

3. Focus Settings

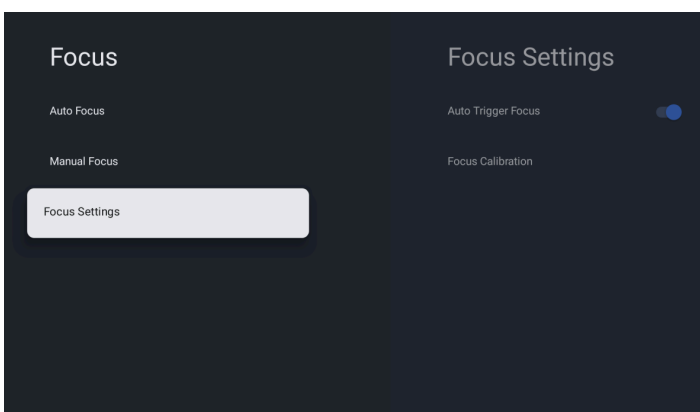

3.1 Auto Trigger Focus

Function path:

[Settings]—[Projector]—[Focus]—[Focus Settings]—[Auto Trigger Focus]

Function description:

This setting is enabled by default, the machine will not be able to autofocus when disabled.

3.2 Focus Calibration


Function path:

[Settings]—[Projector]—[Focus]—[Focus Settings]—[Focus Calibration]

Function description:

This setting is off by default, the machine will do focus calibration when enabled.

 Image Adaption

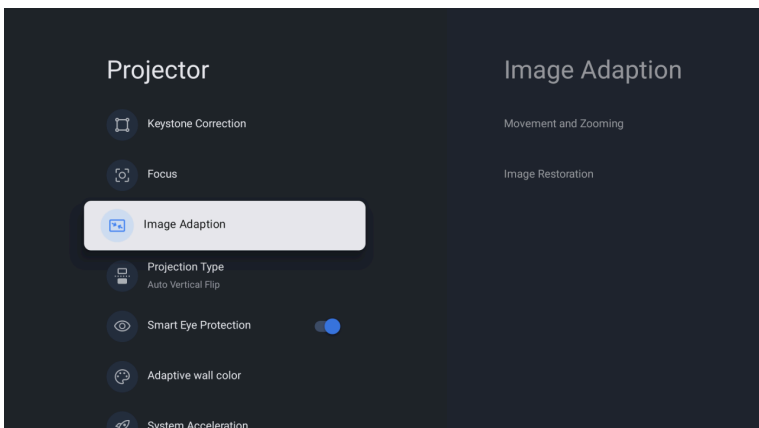

1.Movement and Zooming

Function path:

[Settings]--[Projector]--[ImageAdaption]--[Movement and Zooming]

Function description:

This setting supports zoom, pan and rotate of the projected screen.

2.Image Adaption

Function path:

[Settings]—[Projector]—[Image Adaption]—[This conversation is no longer accessible.

]

Function description:

This setting supports the initial of the current projection screen.

Projection Type

Function path:

[Settings]—[Projector]—[Projection Type]

Function description:

This setting supports selecting the corresponding projection screen according to the location.

1.Auto Vertical Flip

Function path:

[Settings]—[Projector]—[ProjectionType]—[Auto Vertical Flip]

Function description:

This setting is enabled by default, when the projector is turned over for ceiling, the projected screen can be automatically flipped.

Smart Eye Protection

Function path:

[Settings]—[Projector]—[Smart Eye Protection]

Function description:

This feature is enabled by default with the default setting at [Middle]. You can adjust the eye protection sensitivity to your preference. When someone enters the projection screen, it automatically turns off to protect the eyes.

Adaptive wall color (Only for N1S Pro & N1S Ultra&N1S Ultimate)

 
Function path:

[Settings]—[Projector]—[Adaptive wall color]

Function description:

After enabling this feature, the system will calibrate the image colors to harmonize with the wall color.

Display & Sound

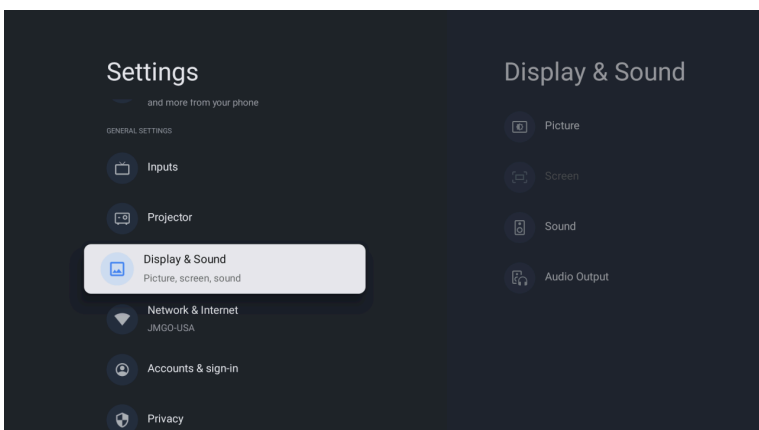

Picture

Function path:

[Settings]—[Dashboard]—[Picture]/[Settings]—[Projector]—[Display&Sound]—[Picture]

1. Brightness

Function path:

[Settings]—[Dashboard]—[Picture]—[Brightness]

Function description:

This setting supports the adjustment of brightness, which can be selected from 1 to 10 by using the left and right buttons of the remote control, and the default brightness is 10.

2. Adaptive Brightness (Only for N1S Pro & N1S Ultra&N1S Ultimate)

Function path:

[Settings]—[Dashboard]—[Picture]—[Adaptive Brightness]

Function description:

This feature is turned off by default. When enabled, it supports automatic adjustment of the projector brightness according to ambient light.

3. Picture Mode

Picture modes include:

[Vivid], [Standard], [Movie], [Game], [Office], and [User], which respectively achieve the highest color gamut (BT2020) with a three-color laser, DCI-P3 color gamut effect, best fidelity, lowest latency, most suitable for office environments, and user-defined effects.

3.1 User picture mode

Function path:

[Settings]—[Dashboard]—[Picture]—[Picture Mode]-[User]-[Advanced Settings]

Function description:

The picture mode is set to [Standard] by default and must be manually switched to [User]. Under the [User] mode, picture adjustments can be made within [Advanced Settings], including picture mode, contrast, saturation, hue, sharpness, gamma, color temperature, HDR, 3D, advanced video, color calibration, 11-point white balance, and restore defaults.

Gamma: Adjusts the overall transition from white to gray to black.

HDR: Stands for High Dynamic Range, enhancing contrast when enabled.

3D Left-Right Inversion: Used to switch the effect between the left and right eyes in 3D mode.

3D Mode: Switching to 3D mode is only available when playing 3D videos in full-screen mode. *Please ensure to select the 3D mode that corresponds to the format of your 3D source for playback.

3.1.1 Advanced Settings—[MPEG_NR]/[Adaptive Luma Control]/[Local Contrast Control]/[MEMC]

Function path:

[Settings]—[Dashboard]—[Picture]—[PictureMode]-[User]—[Advanced Settings]—[MPEG_NR]/[Adaptive Luma Control]/[Local Contrast Control]/[MEMC]

Function description:

This function includes adjustment of noise reduction, global & local contrast and motion compensation respectively.

Sound

Function path:

[Settings]—[Display&Sound]—[Sound]—[Sound Style]/[Speakers]/ [Downmix Mode]

Function description:

By enabling this feature, you can select from multiple Sound Styles (the default option is [Standard]): [Standard], [Music], [Movie], [Sports], as well as turn off Speakers, and choose [Downmix Mode].

Audio Output

Function path:

[Settings]—[Display&Sound]—[Audio Output]—[Digital Output]/[Digital Output Delay]

Function description:

This feature supports selecting various audio output options: [Auto], [Bypass], [PCM], [Dolby Audio-DD+], [Dolby Audio-DD], and adjusting the audio output delay.

Shortcut setting of HDMI (Including CEC)

Function path:

[Settings]—[Dashboard]-[Inputs]—[HDMI]/[Press Menu Button : Input source]—[Inputs]

Function description:

This feature allows for quick settings operations via the remote control's menu button after entering a specific HDMI channel, including switching between HDMI1 and HDMI2.

*The CEC function is forcibly enabled by default at the system level. You only need to connect an external device that supports the CEC function via an HDMI cable to use it.

Screen casting instructions

1. Chromecast

Function description:

Keep the mobile phone and the projector in the same WIFI network, for third-party apps that support Chromecast, select the projector device (Device name) to cast the screen.

*Due to copyright restrictions, certain content cannot be cast to the projector. You can stream the content on the projector by installing the same application on it.

2. Screen Mirroring via AirScreen

To cast the device screen:

You can project the entire screen from your device to the projector.

1. Ensure that both your device and the projector are connected to the same wireless network.
2. Install the AirScreen app on the projector.
3. Open the AirScreen app and follow the on-screen instructions to complete the process.

Google Assistant

Function description:

Press and hold the Google Assistant voice button on the remote control to voice control until a text command after voice recognition appears on the screen, indicating the voice response is successful.

 
Shutdown Menu Setup Instructions

Press and hold the power button of the remote control to call out the shutdown menu setting instructions.

[Sleep]

[Power Off]

[Restart]

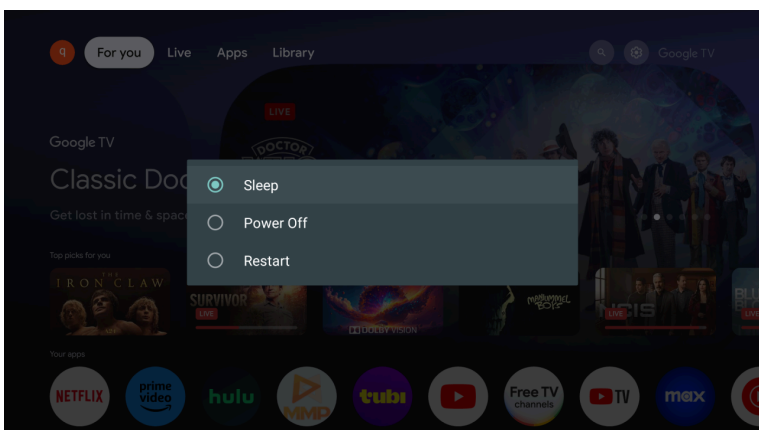

JMGO APP

Download and Install of "JMGO App"

- JMGO App is a mobile application for multi-screen interaction with JMGO projector. Using JMGO App can help you obtain better projection experience.
- Mobile phone for remote control—the mobile phone is also a remote control with JMGO App, and the projection remote control is more convenient.

